




# CONVOYEUR A VIS



# CONVOYEUR A VIS

CAPACITÉS EN PI.<sup>3</sup>/HRE @ 1 RPM • CALCULÉES @ 100% D'EFFICACITÉ

	DIAMÈTRE DU CONVOYEUR								
	4"	6"	9"	12"	14"	16"	18"	20"	24"
1	1.56								
1 1/4	1.44								
1 1/2		5.30	18.99						
2		4.97	18.49	45.28					
2 7/16			17.85	44.42	71.67				
3				42.9	70.15	106.3	153.0		
3 7/16				41.89	68.73	104.7	151.2	209.5	366.4
4					67.10	102.8	149.1	207.1	363.6
5							146.5	201.0	356.4
6								197.5	348.6

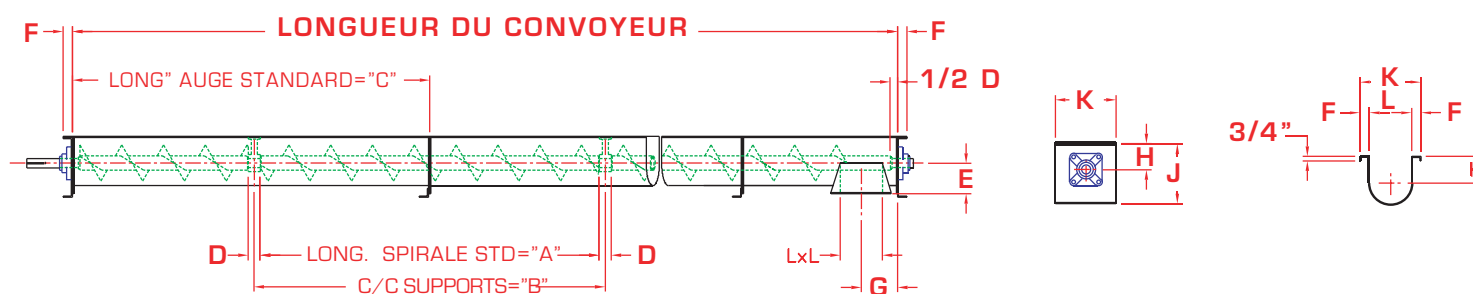

Dia. du conv.	Dia. de l'arbre	A	B	C	D	E	F	G	H	J	K	L
4"	1"	7'10 1/2	10'	10'	1 1/2"	3 3/4"	1 9/16"	4 1/2"	3 5/8"	8 1/4"	8 1/8"	5"
6"	1 1/2"	9'10	10'	10'	2"	5"	1 9/16"	6"	4 1/2"	10 1/8"	10 1/8"	7"
6"	1 1/2"	9'10	10'	10'	2"	5"	1 9/16"	6"	4 1/2"	10 1/8"	10 1/8"	7"
9"	1 1/2"	9'10	10'	10'	2"	7 1/8"	1 9/16"	8"	6 1/8"	14"	13 1/8"	10"
9"	2"	9'10	10'	10'	2"	7 1/8"	1 9/16"	8"	6 1/8"	14"	13 1/8"	10"
9"	2"	9'10	12'	10'	2"	7 1/8"	1 9/16"	8"	6 1/8"	14"	13 1/8"	10"
12"	2"	9'10	12'	10'	2"	8 7/8"	1 9/16"	10 1/2"	7 3/4"	17 3/8"	17 1/8"	13"
12"	2 7/16"	11'10	12'	10'	3"	8 7/8"	2 1/16"	10 1/2"	7 3/4"	17 3/8"	17 1/8"	13"
12"	3"	11'9	12'	10'	3"	8 7/8"	2 1/16"	10 1/2"	7 3/4"	17 3/8"	17 1/8"	13"
14"	2 7/16"	11'9	12'	10'	3"	10 1/8"	2 1/16"	11 1/2"	9 1/4"	20 1/8"	19 1/8"	15"
14"	3"	11'9	12'	10'	3"	10 1/8"	2 1/16"	11 1/2"	9 1/4"	20 1/8"	19 1/8"	15"
16"	3"	11'9	12'	10'	3"	11 1/9"	2 1/16"	13 1/2"	10 5/8"	22 5/8"	21 1/8"	17"
16"	3"	11'9	12'	10'	3"	11 1/8"	2 1/16"	13 1/2"	10 5/8"	22 5/8"	21 1/8"	17"
18"	3"	11'9	12'	10'	3"	12 1/8"	2 3/4"	14 1/2"	12 1/8"	25 1/2"	24 1/2"	19"
20"	3"	11'9	12'	10'	3"	13 3/8"	2 3/4"	15 1/2"	13 1/2"	28 1/2"	26 1/2"	21"
20"	3 7/16"	11'8	12'	10'	4"	13 3/8"	2 3/4"	15 1/2"	13 1/2"	28 1/2"	26 1/2"	21"
24"	3 7/16"	11'8	12'	10'	4"	15 3/8"	2 3/4"	17 1/2"	16 1/2"	34 5/8"	30 1/2"	25"

## GARANTIE

Nos équipements font tous l'objet d'une garantie d'un an pour les pièces et la main-d'œuvre.

Imprimé au Québec, Canada



[www.lmm.info](http://www.lmm.info)  
450 771-6262